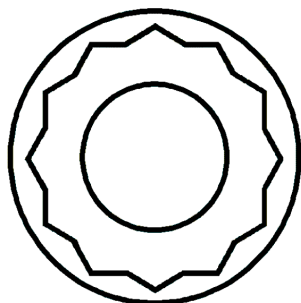
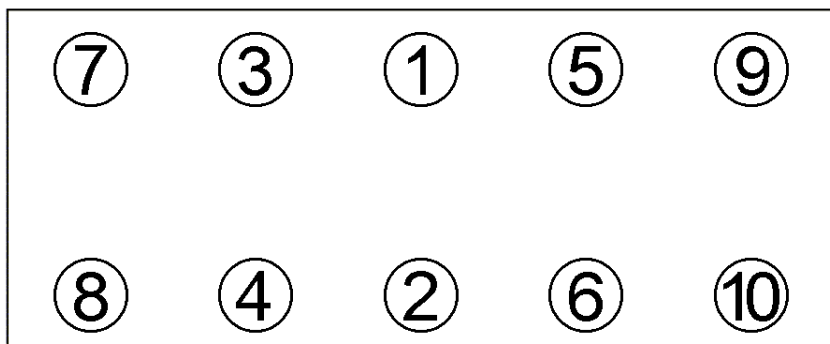


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****818.276**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

710.080
M 10Anziehen/
Tightening/
Serrage/
AprieteE 13
39 - 44 Nm
69 - 74 Nm
* 15 min
69 - 74 NmE 13 S, E 15 S
E 16, E 16 i
29 Nm
69 Nm
29 Nm
69 - 74 Nm**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 77,5 mm

Mot: E13, E15S, E16i, E16S

1,3 ltr.-1,6 ltr.

44-77 kW (60-105 PS)

Cherry, Prairie, Sunny I-II

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

818.276