

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas


651.590

passend für / suitable for
adaptable à / adaptable a

Jeep



Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

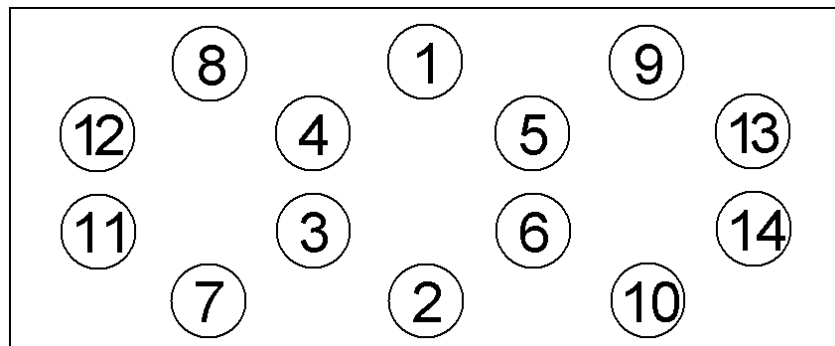

Anziehen/ Tightening/ Serrage/ Apriete	22 lb-ft 45 lb-ft 45 lb-ft 1-10+12-14 / 110 lb-ft 11 / 100 lb-ft	30 Nm 60 Nm 60 Nm 1-10+12-14 / 150 Nm 11 / 135 Nm
---	--	---

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Jeep Cherokee 2001-1999 4.0L L6 242cid
Jeep TJ 2003-2000 4.0L L6 242cid
Jeep Wrangler 2003-2000 4.0L L6 242cid

Jeep Grand Cherokee 2003-1999 4.0L L6 242cid

Elring-Serviceteam
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/01/22

651.590